

INSTRUCTION FOR SERVICING



BROEN REDLINE Hand showers

Spare part set for:

One vertical outlet: 17 701.21

One 45 degree outlet: 17 701.22


Double 45 degree outlet: 17 701.23

Double vertical outlet: 17 701.31

BROEN

INTELLIGENT FLOW SOLUTIONS

Step 1:
(Use the special red plastic tool)

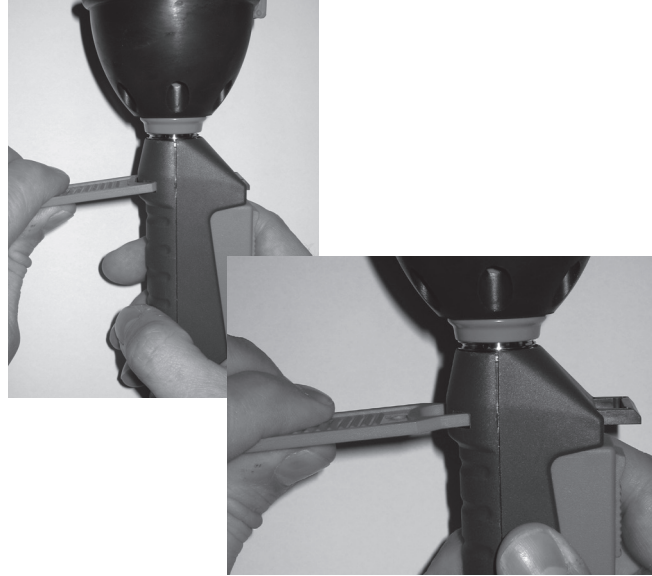

OUTLET END:


- a. Short end of tool: Press the hooks on the clip
- b. Long end of tool: Press the clip fully through

INLET END: As above!

Step 2:
Take apart the top-cover of the shower



Step 3:
Remove the old valve unit

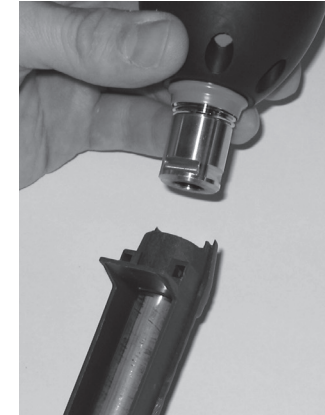

Step 4:
Mount the new valve unit and remount the complete shower
in reverse order!
Test the shower!



BUILDING
INSTALLA-
TIONS

BUILDING
CONTROLS

DISTRICT
HEATING
& GAS

LAB

EMERGENCY
SHOWER
SYSTEMS